



ラプチャーディスクの取付け例

How to attach rupture disk

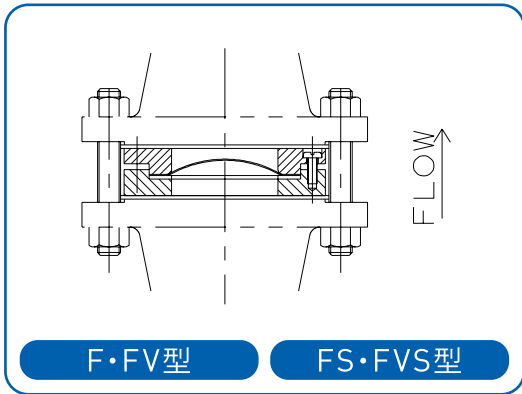


F・FV型

FS・FVS型

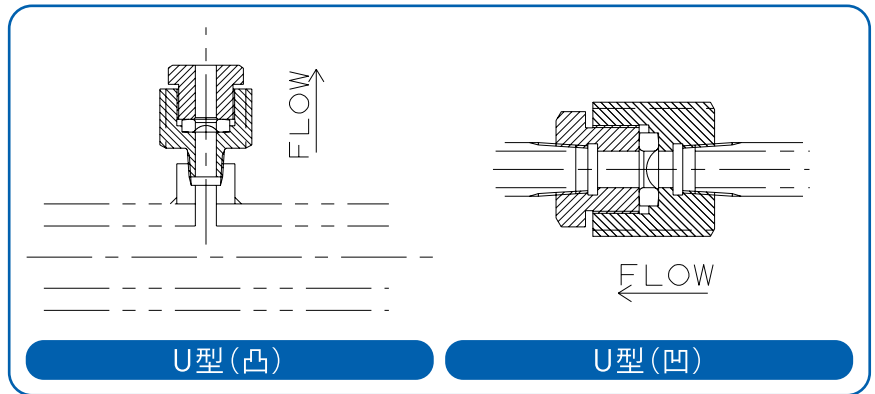


U型(凸)

U型(凹)

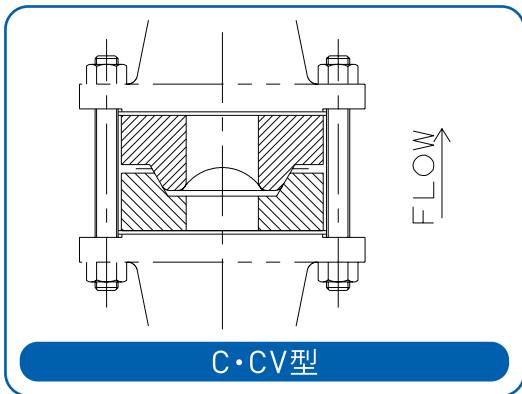


C・CV型

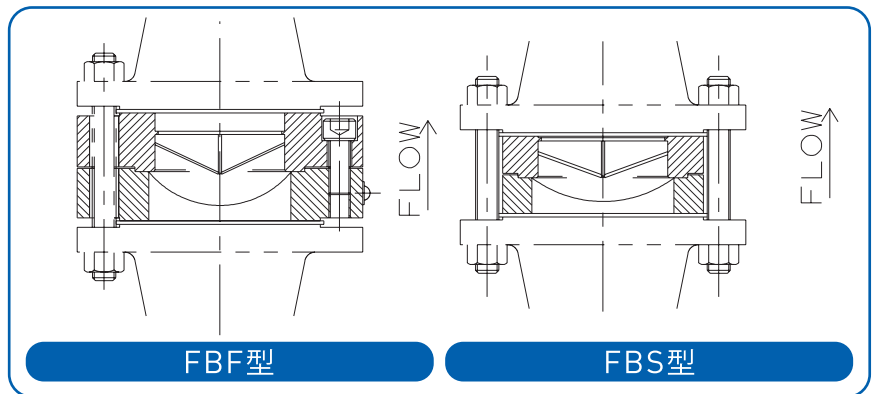


FBF型

FBS型

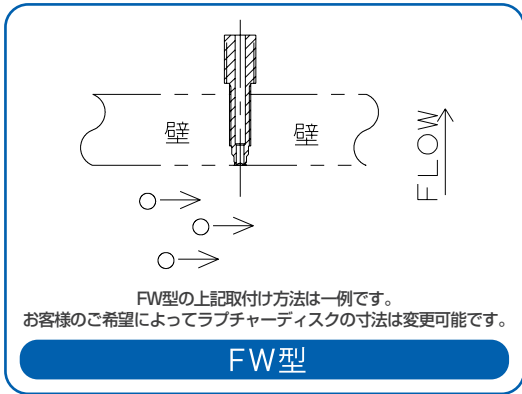


FW型

FW型の上記取付け方法は一例です。
お客様のご希望によってラプチャーディスクの寸法は変更可能です。

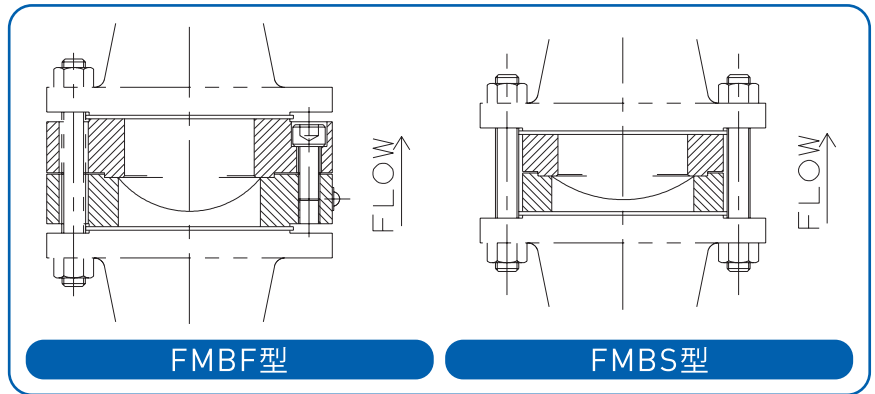

FMBF型

FMBS型

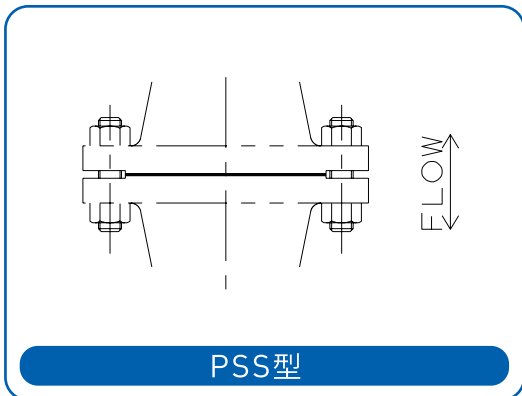

PSS型

- 一般規格 (JIS・ASME・ANSI など) のフランジにはさみ込んで使用します。
- ラプチャーディスクの固定方法にご指定・ご希望がございましたら、営業担当へご連絡ください。
- 標準ではラプチャーディスクホルダーとフランジ間に使用するガスケットを付属していません。ご用命の際はご相談ください。
- 二次側に雨水やほこりおよび配管内のさびなどがたまらないようにし、また外力からの保護を考慮してください。
- ディスクはやわらかい薄い箔または板のため、取扱いは十分ご注意ください。
- Rupture disk is installed between standard flange (such as JIS, ASME, ANSI).
- Please contact our Sales if you have any order or request about the way of installing rupture disk into your equipment.
- No gasket comes with our products used between rupture disk holders and flange. Should you have any request, please contact our Sales.
- Please keep away from rain water, dust and stain in the pipe, also from external force.
- As rupture disk is soft and thin foil or plate, please handle with care.

※製品に関してご不明な点がございましたら、以下の電話番号までお気軽にお問い合わせください。

お問合せ窓口：本社営業課

03-3765-4161

受付時間 9:00~18:00 (土日祝日を除く)

〒140-0013

東京都品川区南大井 6-28-11 谷口ビル 2F

Taniguchi BLDG. 2F, 6-28-11 Minamioi, Shinagawa-ku, Tokyo 140-0013

